



KS - 25S アプライプリンス粒剤6、10繰出し表

繰出し量 グラム/1分間										搬送スピード 箱数/1時間	
910										1092	
900										1080	
890										1068	
880										1056	
870										1044	
860										1032	
850										1020	
840										1008	
830										996	
820										984	
810										972	
800										960	
790										948	
780										936	
770										924	
760										912	
750										900	
740										888	
730										876	
720										864	
710										852	
700										840	
690										828	
680										816	
670										804	
660										792	
650										780	
640										768	
630										756	
620										744	
610										732	
600										720	
590										708	
580										696	
570										684	
560										672	
550										660	
540										648	
530										636	
520										624	
510										612	
500										600	
490										588	
480										576	
470										564	
460										552	
450										540	
440										528	
430										516	
420										504	
410										492	
400										480	
390										468	
380										456	
370										444	
360										432	
350										420	
340										408	
330										396	
320										384	
310										372	
300										360	
290										348	
280										336	
270										324	
260										312	
250										300	
240										288	
230										276	
220										264	
210										252	
200										240	
190										228	
180										216	
170										204	
160										192	
150										180	
140										168	
130										156	
120										144	
110										132	
100										120	
90										108	
80										96	
70										84	
60										72	
50										60	
繰出し量										搬送スピード	
グラム/1分間										箱数/1時間	
調整ダイヤル	1	2	3	4	5	6	7	8	9	10	調整ダイヤル

重 要

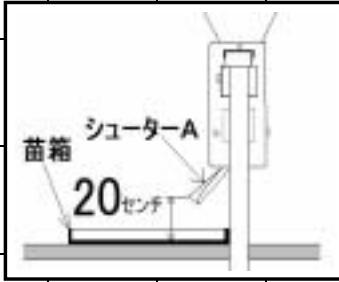

苗箱の底の高さから
シューターAの先端まで
20センチの高さに
セットしてください

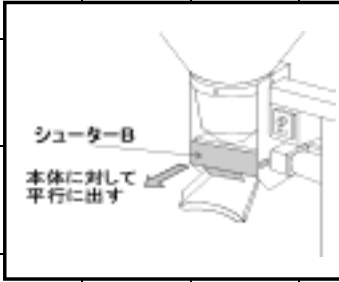

2箇所のボルトを緩め
シューターBを前方に
引き出して再び
ボルトを締めてください

